

LOUD Security – First Alert - Quick Reference Guide

To Arm the System*

1. **Away Mode:** MASTER CODE + 2 (Arms all zones including motions. Entry delay is active)
2. **Stay Mode:** MASTER CODE + 3 (Arms all zones EXCEPT interior motions. Entry delay is active)
3. **Maximum Mode:** MASTER CODE + 4 (Turns on all zones and WITHOUT entry delay) (Exit delay is still in effect)
4. **Instant Mode:** MASTER CODE + 7 (Arms all doors and windows WITHOUT entry delay) (Exit delay is still in effect)

To Disarm the System

1. MASTER CODE+1 (*Disarms all security zones*)

TO BYPASS A ZONE (*Unprotect / Turn Off an area*)

1. MASTER CODE + 6 + ZONE NUMBER (IE; 01, 02, 03 ETC) + Pound (#),

NOTE *The bypassed zone will remain bypassed until the system is disarmed. You will have to bypass it again the next time you arm the system.*

***CHIME MODE** (*Keypad will beep when a zone is opened*)

1. MASTER CODE + 9, (The word “chime” will appear on the keypad if entered correctly)

TO RESET SYSTEM (*After any Alarm*)

1. MASTERCODE + 1 (repeat 2 times), (If this is not entered twice, the system will not return to the ready position)

CHANGE / ADD CODES (*see notes*)

1. MASTERCODE:

ENTER PRESENT MASTER CODE + 8 + 02 + new 4-digit code + new 4-digit code again to verify

2. ADD ADDITIONAL USER CODES:

ENTER MASTER CODE + 8 + USER NUMBER (IE: 03, 04, 05 ETC). + New 4-digit code.

*****User codes must be 4 digits long and start in user number 03**

*****The Keypad will beep 3 times after a new user code is accepted.**

***** Once you start programming user codes, you must continue through quickly or the system will make you start over.**

EMERGENCY BUTTONS

1. Press and hold the button until the siren sounds and keypad beeps (approximately 3 seconds)
A = Fire, B = Police, C = Medical